

PRE-FIRING CHECKLIST



KILN FIRING SYDNEY

LOCATION: BOTANY NSW

MON - FRI 9 - 5


- **Greenware pieces (for bisque firing) are completely dry:**

Ensure that all greenware pieces are thoroughly dry. This step is crucial to prevent cracking or exploding during the firing process. Touch each piece to confirm that it feels uniformly dry, both on the surface and internally. It's advisable to wait at least 1 week after forming the pieces before attempting to fire greenware to ensure complete dryness.



- **The base of every piece and 5mm above the base are free from glaze:**

Inspect each piece to ensure that no glaze is present on the base or within 5mm above it. Glaze on these areas can cause pieces to stick to kiln shelves or to each other during firing, resulting in possible damage to your pieces and the kiln. If you need to glaze close to the base, contact us for alternative firing options.

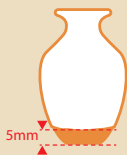

- **Read all the terms, conditions, and FAQs:**

Familiarize yourself with all the terms, conditions, and frequently asked questions (FAQs) related to your kiln firing service. This step also helps address any common queries or concerns that may arise during the firing process.

- **All pieces are packed securely in a box:**

Pack your pottery pieces in a sturdy box with ample cushioning. Use bubble wrap, newspaper, tissue paper, honey comb paper or towels to secure each piece individually, ensuring they don't touch each other. Fragile parts like handles or spouts should be given extra padding. Make sure the pieces are tightly packed and the box is filled so that the pieces don't shift during transit.



Thank You!

KILNFIRINGSYDNEY.COM
INFO@KILNFIRINGSYDNEY.COM